

SHP-I 200 Plus
SHP-I 300 Plus
SHP-I 300 H Plus

DHW heat pump

2



Table of contents

1	Special information	3	15.1	Descaling the electric emergency/auxiliary heater.....	17
2	General information	3	15.2	Checking valves	18
2.1	Units of measurement	3	15.3	Checking consumption indicator on signal anode.....	18
2.2	Symbols in this document	3	15.4	Replacing the power cable.....	19
2.3	Target groups.....	3	16	Shutdown (qualified contractors)	19
3	Safety.....	3	16.1	Draining the DHW cylinder.....	19
3.1	Structure of the warning notices.....	3	17	Specification	19
3.2	Intended use	4	17.1	Dimensions and connections.....	19
3.3	Foreseeable misuse.....	4	17.2	Wiring diagram	23
3.4	Safety instructions.....	4	17.3	Data table.....	25
4	Appliance description.....	4	18	Guarantee	26
4.1	Standard delivery	4	19	Environment and recycling	26
4.2	Accessories	4			
4.3	Function description.....	5			
5	Transportation (qualified contractors)	6			
6	Storage	7			
7	Installation (qualified contractors)	7			
7.1	Installation site.....	7			
7.2	Siting the appliance	8			
7.3	Water connection	8			
7.4	Condensate drain	9			
8	Commissioning (qualified contractors)	9			
8.1	Filling the DHW cylinder.....	9			
8.2	Electrical connection	9			
8.3	Function test	12			
8.4	Recommissioning.....	12			
9	Operation.....	12			
9.1	Display and controls.....	12			
9.2	Pairing the heat pump with the app	13			
9.3	Activating/deactivating rapid heat-up.....	13			
10	Settings.....	13			
11	Cleaning	13			
11.1	Cleaning the casing top	13			
11.2	Cleaning the condensate drain	13			
11.3	Dissolving scale build-up	13			
12	Cleaning (qualified contractors)	13			
12.1	Cleaning the evaporator	13			
13	Troubleshooting	14			
13.1	Activating/deactivating emergency heating mode	16			
14	Troubleshooting (qualified contractors)	16			
14.1	Resetting the high limit safety cut-out	16			
14.2	Safety pressure limiter	17			
15	Maintenance (qualified contractors)	17			

1 Special information

- The appliance may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities or a lack of experience and expertise, provided that they are supervised or they have been instructed on how to use the appliance safely and have understood the potential risks. Children must never play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- Observe all applicable national and regional regulations and instructions during installation.
- To prevent injury and damage, only contractors authorised by the manufacturer may replace the power cable. Use an original spare part.

2 General information



- Read these instructions carefully before using the appliance and retain them for future reference.

2.1 Units of measurement

All measurements are given in mm unless stated otherwise.

2.2 Symbols in this document

Symbol	Meaning
	This symbol indicates possible property damage, equipment damage, consequential damage or environmental damage.
	General information is indicated by the adjacent symbol.
►	This symbol indicates that you have to do something.
✓	This symbol indicates that you must fulfil certain prerequisites before you perform the following steps.
⇒	This symbol indicates a result or intermediate result.
□□■	These symbols show you the software menu level (in this example level 3).
[► 11]	This symbol indicates a reference to the corresponding page number (page 11 in this example).

2.3 Target groups

Operator

Person without specialist expert knowledge

Qualified heating contractor

Person with specialist expert knowledge in the following areas: heating technology, heating media, building services and engineering, ventilation and air conditioning technology, measuring technology, heat pump technology, environmental technology, occupational safety and fire safety

Qualified electrical contractor

Person with specialist expert knowledge in the following areas: electrical engineering, measuring technology, occupational safety and fire safety

Apprentice

Apprentices may only carry out the assigned tasks under professional supervision and instruction.

Professional qualification

Subject to local regulations, a training course, a higher education qualification or further development training will be required.

Gender-sensitive documentation

We endeavour to follow language changes and use gender-aware linguistic form without compromising fluency. We aim to recognise, include and speak to all genders in our documentation.

3 Safety

3.1 Structure of the warning notices

3.1.1 Section-specific warning notices

Section-specific warning notices apply to all steps in the section.

Injury

CAUTION



Type and source of risk

Consequence(s) of failure to observe the warning notice

- Hazard prevention measure(s)

Property damage, consequential losses, environmental pollution

NOTICE



Type and source of risk

Consequence(s) of failure to observe the warning notice

- Hazard prevention measure(s)

3.1.2 Embedded warning notices

Embedded warning notices apply only to the step immediately following the notice.

- **SIGNAL WORD: Consequence(s) of failure to observe the warning notice. Hazard prevention measure(s).** Step to which the warning notice refers

3.1.3 Key to symbols

Symbol	Type of risk
	Injury
	Electrocution
	Burns, scalding

3.1.4 Signal words

Signal word	Meaning
DANGER	Failure to observe this information will result in death or serious injury.
WARNING	Failure to observe this information may result in death or serious injury.
CAUTION	Failure to observe this information may result in moderate or minor injury.
NOTICE	Failure to observe this information may result in property damage, consequential losses or environmental damage.

3.2 Intended use

The appliance is designed to heat drinking water.

The appliance is designed for indoor installation.

The appliance is intended for domestic use. The appliance can also be used in non-domestic environments, e.g. in small businesses, as long as it is used in the same way.

Observation of these instructions, the instructions for any accessories used as well as the specifications also forms part of the correct use of this appliance.

3.3 Foreseeable misuse

Any other use beyond that described shall be deemed to be outside the intended use.

Heating liquids other than potable water is not permitted.

Ambient temperatures below the application limit

If the temperature falls below the lower application limit, frost may form on the evaporator depending on the humidity and water temperature. If frost forms on the evaporator, the frost switch turns the compressor off. The compressor is switched on automatically once the evaporator has defrosted.

If it is necessary to defrost the evaporator, the heat-up processes will take longer.

Ambient temperatures outside the specified intake temperature

The performance data of the appliance is determined with the intake temperature specified in the data table. Below this intake temperature the appliance efficiency and output decrease. The heat-up time is extended.

Ambient temperatures above the application limit

If the upper application limit is exceeded, the safety equipment switches the appliance off. During a cool-down time of 60 minutes, the electric emergency/auxiliary heater takes over DHW heating. After the cool-down time, the application limit is checked again by the fan lead time. If the ambient temperature is again above the permissible temperature value, the electric emergency/auxiliary heater continues DHW heating.

3.4 Safety instructions

Injury

- If the insulation or individual components are damaged, there is a risk of fatal electrocution. If such damage has occurred, switch off the power supply and arrange a repair.
- The work described in this manual requires specialised knowledge of electrical engineering and heating technology. If the work described is carried out without the appropriate expertise, this may result in injury. Only qualified contractors are permitted to work on the appliance.

- The water in the DHW cylinder can be heated to temperatures in excess of 60 °C. There is a risk of scalding at outlet temperatures in excess of 43 °C. Ensure you do not come into contact with the outflowing water or components that have heated up.
- If refrigerant escapes in high concentrations, it can cause symptoms such as headaches, loss of consciousness or irregular heartbeat. Avoid direct skin contact and do not inhale the vapours. Ventilate the rooms affected.
- The refrigerant is highly flammable. Keep the installation site clear of heat, sparks and other ignition sources, in particular in the event of a leak.
- Replacing electrical components that are not an ignition source in their original condition with components not recommended by the manufacturer (e.g. components that produce hot surfaces, sparks or arcing) can cause the refrigerant to catch fire if there is a leak.
- Unsuitable spare parts and accessories may jeopardise the safety of the product and persons using the appliance. Always use original spare parts and original accessories.
- Safe use is not guaranteed if installation of the appliance is incomplete. Only operate the appliance once installation is complete. Only operate the appliance with the casing and cover closed.

Property damage, consequential losses, environmental pollution

- Poor air quality can damage the appliance. Keep the appliance installation site free from air contaminated with oil or salt (chloride). Keep the installation site free from corrosive and explosive substances. Avoid contaminating the installation site with dust, hairspray or substances containing chlorine or ammonia.
- If the air supply is restricted, the operational reliability of the appliance cannot be guaranteed. Never cover the appliance.
- The appliance may be damaged if the DHW cylinder is empty and the appliance is switched on. Only operate the appliance when the DHW cylinder has been filled.
- The hoses may be damaged if they are laid incorrectly. Do not kink the hoses.

Emergency shutdown

- ▶ Disconnect the power supply by pulling the power plug from its socket.
- ▶ Close the cold water inlet.

4 Appliance description

4.1 Standard delivery

- 1× condensate drain bend
- 1× insulated screw fitting, G1/2 - 12
- 2× insulated screw fittings, G1 - 22

4.2 Accessories

4.2.1 Required accessories

Various safety assemblies are available that are selected according to supply pressure. These type-tested safety assemblies protect the appliance against unacceptable excess pressure.


4.3 Function description

The appliance supplies DHW to multiple draw-off points.

Function

There is a closed circuit within the heat pump which contains refrigerant.

- The heat pump extracts heat from the ambient air, which is transferred to the refrigerant in the refrigerant circuit.
- The evaporator heats the refrigerant further so that it changes from a liquid to a gaseous state.
- The compressor draws in the gaseous refrigerant and compresses it. This increase in pressure raises the refrigerant temperature.
- In the downstream condenser, the refrigerant then transfers heat to the DHW cylinder.
- The expansion valve reduces the pressure that is still present.
- The cycle begins again.
- When a DHW draw-off point is opened, cold incoming water forces the domestic hot water out of the appliance.

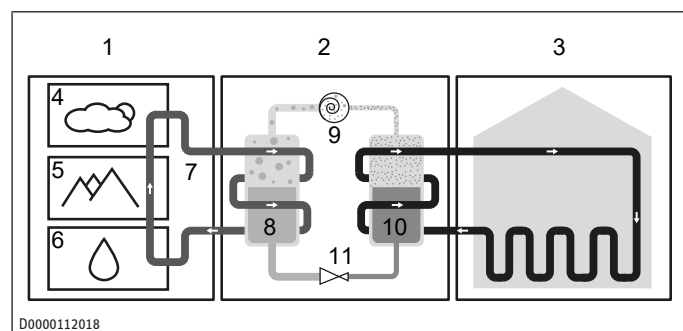

- | | |
|--|-----------------------------------|
| 1 Heat source | 2 Heat pump (refrigerant circuit) |
| 3 Heat distribution system (heating circuit) | 4 Air |
| 5 Ground | 6 Water |
| 7 Environmental energy | 8 Evaporator |
| 9 Compressor | 10 Condenser |
| 11 Expansion valve | |

The ambient air in the installation room may cool by several degrees due to the extraction of heat.

The lower the temperature of the intake air and the higher the selected set temperature, the longer the heat-up time. The heating output of the heat pump drops and the demand for electrical energy increases.


Appliance design

The heat pump unit is located in the upper section of the heat pump.

The heat pump is controlled electronically.

Subject to the power supply and your draw-off patterns, the heat pump automatically heats water to the selected set temperature.

The DHW cylinder is located in the lower section of the heat pump. To protect against corrosion, the DHW cylinder is coated internally with special enamel and equipped with a protective anode.

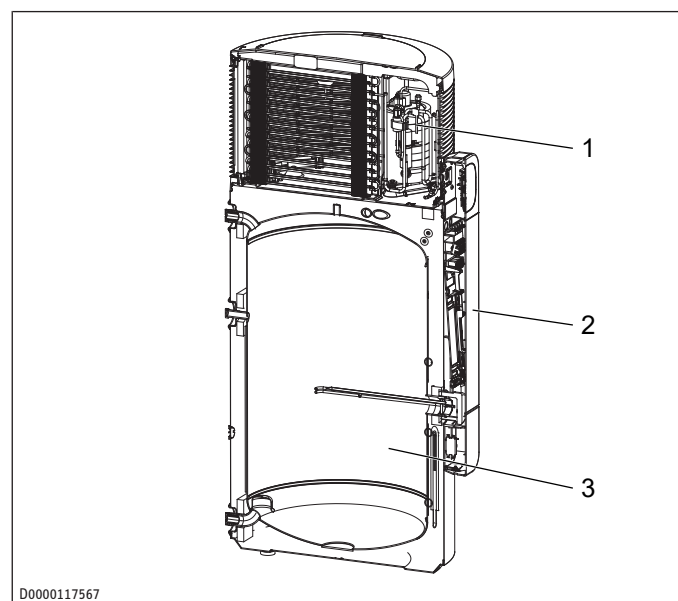


- | | |
|------------------|---------------------------------------|
| 1 Heat pump unit | 2 Control panel with programming unit |
| 3 DHW cylinder | |

4.3.1 DHW heating

The appliance is equipped with two temperature sensors.

- The cylinder top sensor captures the water temperature in the upper section of the cylinder.
- The integral sensor determines the average cylinder temperature.

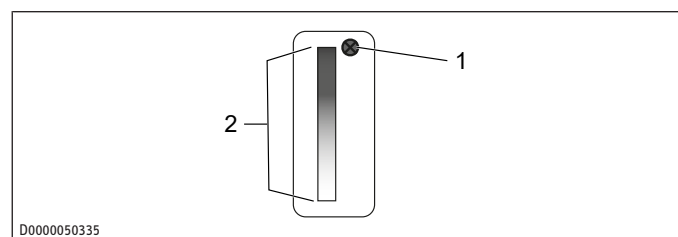

- | | |
|-----------------------|-------------------|
| 1 Cylinder top sensor | 2 Integral sensor |
|-----------------------|-------------------|

The MyStiebel app displays the temperature in the upper section of the cylinder, which is captured by the cylinder top sensor. The control unit uses the average cylinder temperature captured by the integral sensor.

DHW heating starts in the following cases:

- The cylinder top sensor determines an actual temperature that is 6 K below the set temperature.
- The available mixed water amount drops to the percentage share of the maximum mixed water amount. The available mixed water amount is calculated on the basis of the average cylinder temperature. The mixed water amount is only calculated if the water temperature in the upper section of the cylinder is higher than 40 °C. At water temperatures below 40 °C (± 1 K), the mixed water amount is not calculated.

The temperature captured by the cylinder top sensor may still correspond to the set temperature.

4.3.2 Defrost monitoring

The appliance is equipped with an electronic defrost monitor.

Low intake temperatures may result in the formation of hoar frost on the evaporator depending on the air humidity and DHW temperature.

The appliance starts the defrosting process when the temperature falls below the set limit value.

DHW heating is interrupted during the defrosting process.

In the MyStiebel app, it is possible to activate the electric emergency/auxiliary heater to heat the water.

If it is necessary to defrost the evaporator, the heat-up processes will take longer.

The appliance switches off the compressor during the defrosting process. The fan continues to run.

The defrosting process is displayed in the MyStiebel app.

The appliance stops the defrosting process when the temperature exceeds the set limit value.

4.3.3 Frost protection

The appliance activates a frost protection function if the DHW temperature is below a limit value.

The appliance heats the water with the heat pump. If the temperature falls below the application limit or the temperature in the DHW cylinder drops, the electric emergency/auxiliary heater is switched on.


The heat pump and electric emergency/auxiliary heater switch off once the DHW temperature is above the limit value again.

4.3.4 Electric emergency/auxiliary heater

Water is normally heated by the heat pump of the appliance.

If the temperature falls below or exceeds the application limits, the electric emergency/auxiliary heater takes over DHW heating to the set temperature. Heat pump operation is interrupted.

Once the appliance is operating within the application limits again, the electric emergency/auxiliary heater switches off and DHW heating continues with the heat pump.

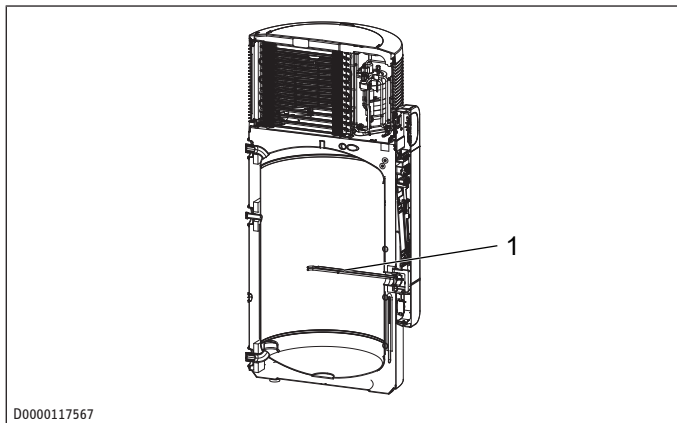

1 Electric emergency/auxiliary heater

Emergency heating mode

Emergency heating mode can be used to start up the electric emergency/auxiliary heater (see chapter *Activating/deactivating emergency heating mode* [► 16]).

Rapid/comfort heat-up

If a one-off demand for extra hot water arises, you can activate this function (see chapter *Activating/deactivating rapid heat-up* [► 13]).

4.3.5 External signal transmitter

External signal transmitters can be integrated via the built-in contact input, e.g. a photovoltaic system to make use of solar power generated on site.

4.3.6 External switching device

The device can be operated with an external switching device that interrupts the power supply to the appliance. This can be, for example:

- External time switch
- Switched socket
- Energy management system
- Voltage-interrupting power-OFF signal

4.3.7 Runtime-dependent rapid heat-up

The heat pump generally heats the water to the selected set temperature. If the set temperature is not reached after the set runtime, the heat pump switches on the electric emergency/auxiliary heater as well.

- When the air intake temperature drops, the heat pump's heating output is reduced and the heat-up time is extended. Activate the "runtime-dependent rapid heat-up" function during the winter months and as required in spring/autumn when outside temperatures are low.

Once the set temperature has been reached, the electric emergency/auxiliary heater is deactivated until the set runtime has elapsed again following a heat demand.

To prevent excessive power consumption, disable this function in summer and where possible in spring/autumn. When the function is activated, we recommend only reducing the factory preset if absolutely necessary for the same reason.

4.3.8 Apps

The appliance can be operated via the app, or via the rotary selector and the buttons on the appliance.

The apps can be used to connect the heat pump to your mobile device.


The apps are available in the App Store® and Google Play Store™.

- App for installers: Servicewelt app
- App for operators: MyStiebel app

5 Transportation (qualified contractors)

Observe the following information:

- The appliance has a high centre of gravity and low overturning moment.
 - The appliance casing is not designed to withstand strong forces.
 - The appliance is easier to transport in its packaging than unpacked.
- Transport the appliance at temperatures between 0 °C and +45 °C.
- Transport the appliance vertically. You can transport the appliance horizontally for a short time (max. 24 hours) on flat, smooth roads. In this case, leave the appliance in the lower part of the box.

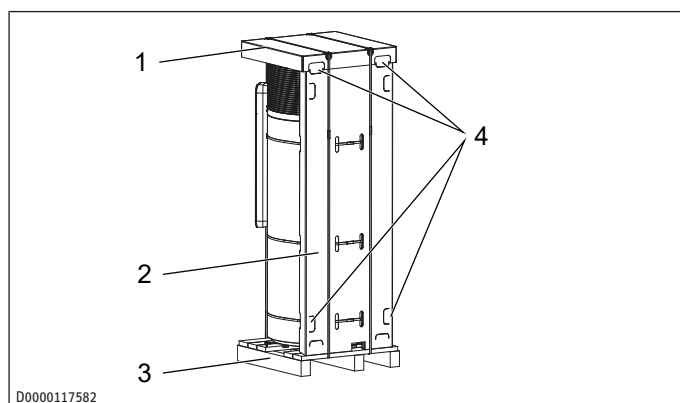

- 1 Cover
2 Lower part of the box
3 Pallet
4 Recessed grips

Transporting the appliance in its box on a pallet


- Use the recessed grips and the bottom section of the pallet to carry the appliance.

Transporting the appliance on a pallet without the upper part of the box, but with the lower part

- Cut the vertical straps.
- Remove the upper part of the box from the appliance cover.
- Carry the appliance to its installation site by the recessed grips.

Transporting the appliance with the upper part of the box (without pallet)

- Cut the vertical straps.
- Remove the upper part of the box from the appliance cover.
- Remove the fixing screws of the metal brackets from the pallet.

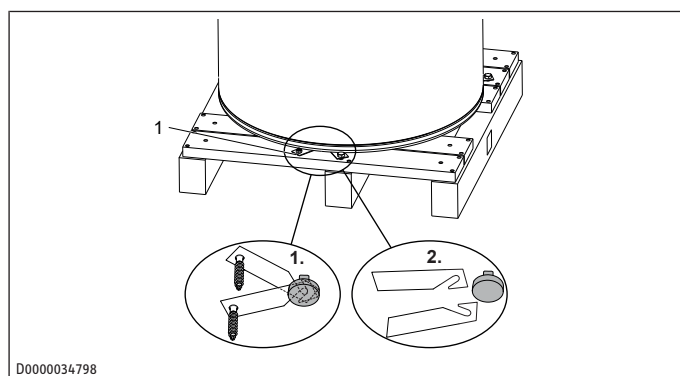

- 1 Metal bracket fixing screw

- Push the metal brackets towards the centre of the appliance to unhook them from the appliance feet.
- Pull the metal brackets out from underneath the appliance.
- **WARNING: If the appliance is tilted too far, it may tip over and cause injury. Take note of the appliance's weight and centre of gravity.** Slightly tip the appliance and carefully roll it off the pallet.
- Carry the appliance to its installation site by the recessed grips.

6 Storage

Store the appliance

- Vertically
- Dry
- Dust-free
- Free from aggressive substances
- Covered (if it has been unpacked)

7 Installation (qualified contractors)

7.1 Installation site


Appliance damage

- The air intake and air discharge must be unobstructed.
- The installation site must be well ventilated.
- The installation site must be free from flammable, highly combustible gases and substances, as well as high levels of dust.
- The substrate of the installation site must be level and have sufficient load bearing capacity. Take note of the weight of the appliance with a full DHW cylinder. If the appliance is not level, there is a risk of appliance damage.
- Contaminated air can cause corrosion of copper materials in the refrigerant circuit. The evaporator may corrode, causing the appliance to fail. Do not install the appliance in areas where the following substances are present.

Impermissible substance	Example of installation site with impermissible substance
Atmospheres containing ammonia	Sewage works, pigsties
Substances which block the evaporator	Air containing oil or fat, dust (cement, flour, etc.). Notice: If the air contains hairspray (e.g. in hairdressing salons), the appliance should be operated with shorter maintenance intervals.
Saline environments	Coastal installations (< 200 m from the coast) can reduce component service life.
Atmospheres containing chlorine or chloride	Swimming pools, salt works
Atmospheres containing thermal water	
Formaldehyde in the atmosphere	Certain wood-based materials (e.g. OSB boards) Certain insulating materials (e.g. foams based on urea-formaldehyde (UF in-situ foams))
Carboxylic acid in the atmosphere	Extract air from kitchens Components of floor cleaners (e.g. vinegar cleaner)

Minimum clearances

- Leave sufficient space to provide access for installation, maintenance and cleaning. Maintain the required minimum clearances.

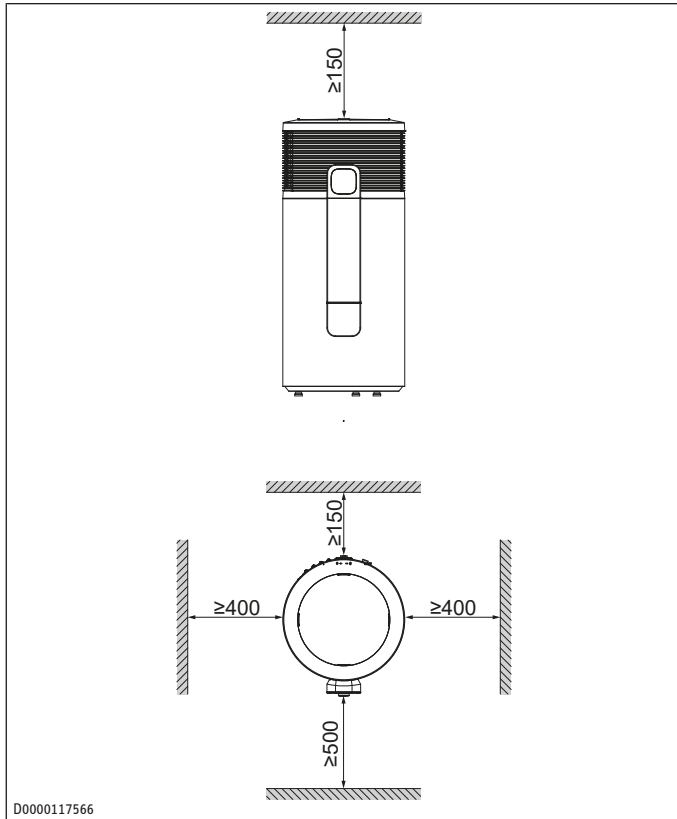

Efficiency

- To keep the pipe runs as short as possible, install the appliance close to the kitchen or bathroom.
- The appliance performance data is calculated according to the relevant standards, using the intake temperature specified in the data table. Below this temperature the appliance efficiency and output decrease. The heat-up time is extended.

Recirculation air mode


- The appliance must not impair the operation of other appliances in the installation room.
- Other appliances in the installation room must not interfere with operation of the heat pump.
- You can improve the efficiency of the appliance by utilising the waste heat from other appliances to heat the domestic hot water, e.g. boilers, tumble dryers or freezers.

Sound emissions

- The sound emissions are louder on the air intake and air discharge sides of the appliance than on the closed sides. Do not direct the air intake or air discharge towards noise-sensitive rooms of the house, e.g. bedrooms.
- To prevent adverse effects from operating noise, never install the appliance close to bedrooms.


7.2 Siting the appliance

- Cut the vertical straps.
- Remove the upper part of the box from the appliance cover.
- Remove the fixing screws of the metal brackets from the pallet.

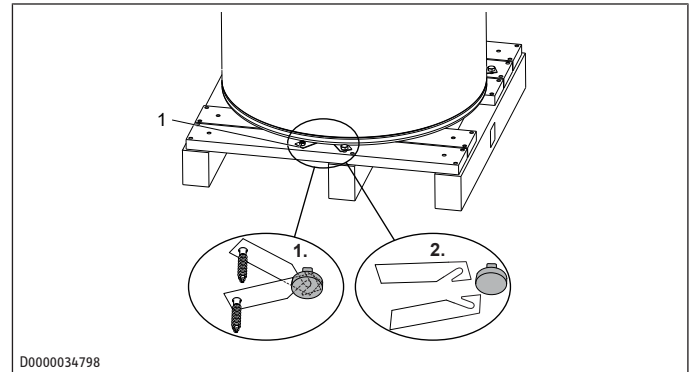

1 Metal bracket fixing screw

- Push the metal brackets towards the centre of the appliance to unhook them from the appliance feet.
- Pull the metal brackets out from underneath the appliance.
- WARNING: If the appliance is tilted too far, it may tip over and cause injury. Take note of the appliance's weight and centre of gravity.** Slightly tip the appliance and carefully roll it off the pallet.
- Position the appliance at the final installation site.
- Maintain the minimum clearances.
- Remove the transport plugs from the connections for the water lines.
- NOTICE: The appliance can be damaged if it is not vertical.** Level the appliance using the height-adjustable feet.

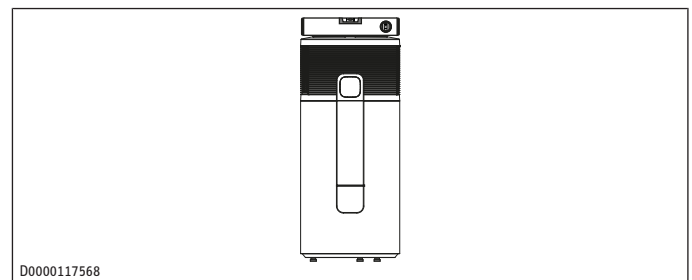

7.3 Water connection

- ✓ The cold water line is made from galvanised steel, stainless steel, copper or plastic.
- ✓ The DHW line is made from stainless steel, copper or plastic.
- NOTICE: Foreign bodies, such as welding pearls, rust or sealing material, can impair the operational reliability of the appliance.** Flush the pipework thoroughly.
- Ensure that the water is free of contaminants. Please observe the section on water quality in this chapter.
- NOTICE: To protect against corrosion, make the water connection with flat gaskets. Do not use hemp on the connections.** Connect the supplied pipes to the cold water inlet (c01) and the DHW outlet (c06). Use the seals, insulating sleeves and union nuts for this purpose.

- ▶ Install a drain valve at the lowest point in the cold water inlet.
- ▶ Install a safety valve.

Safety valve

- Make sure that the safety valve drain cannot be shut off.
- ▶ Size the drain pipe so that water can drain off unimpeded when the safety valve is fully opened.
- ▶ Ensure that the drain pipe of the safety valve is open to the outside.
- ▶ Lay the drain pipe of the safety valve with a constant fall in a room free from the risk of frost.
- ▶ Expansion water escapes from the safety valve. Make sure that expansion water can drip into a drain, e.g. a tank or funnel.
- ▶ Install a safety valve (850 kPa) in the cold water inlet.

Pressure reducing valve

- ▶ The maximum pressure in the cold water inlet must be at least 20 % below the response pressure of all safety valves. If the maximum pressure in the cold water inlet is higher, install a pressure reducing valve.
- ▶ Set the pressure reducing valve to 680 kPa.

DHW circulation



The heat losses in the DHW circulation line plus the electrical power consumption of the DHW circulation pump reduce the efficiency of the appliance. The cooled water in the DHW circulation line mixes with the cylinder content.

- ▶ If possible, dispense with the DHW circulation line.
- ▶ If you need to install a DHW circulation line, ensure the DHW circulation pump is controlled according to temperature or time. Do not use the DHW circulation pump in continuous operation.

- ▶ If necessary, install a DHW circulation line.
- ▶ Insulate the DHW circulation line.

7.4 Condensate drain

- ✓ The diameter of the condensate drain hose is larger than the diameter of the condensate drain bend.
- ▶ Connect the condensate drain bend to the connection for the condensate drain (d45).
- ▶ Connect a condensate drain hose to the condensate drain bend.
- ▶ Use a condensate pump if there is insufficient fall.
- ▶ Install a replacement siphon.
- ▶ Install the condensate drain with an outlet that opens freely above the siphon. The condensate drain must be open to atmosphere.

8 Commissioning (qualified contractors)

- ▶ If the appliance has been stored or transported horizontally, leave it to rest in an upright position for at least one hour before commissioning.
- ▶ If the appliance has not been stored in a frost-free environment, check whether the high limit safety cut-out has been triggered (see chapter *Resetting the high limit safety cut-out* [▶ 16]).

8.1 Filling the DHW cylinder

- ▶ Close the drain valve.
- ▶ To vent the pipework, open all hot water draw-off points and the shut-off valve in the cold water inlet.
- ▶ As soon as water comes out, close the hot water draw-off points.
- ▶ Open the safety valve until water escapes.

8.2 Electrical connection


- ✓ The DHW cylinder is filled.
- ▶ Install a residual current device (RCD).
- ▶ If the power cable is too short, proceed as follows:
 - Disconnect the power cable in the appliance.
 - Extend or replace it with a longer power cable.
 - Route the power cable through the cable grommet such that it is watertight.
- ▶ Connect the appliance as described in the following chapter.

8.2.1 Standard connection without external signal transmitter


- ▶ Insert the mains plug of the appliance into a standard safety socket.

8.2.2 Connection variant: Operation with external switching device that interrupts appliance power supply


- ▶ Release the lock on the underside of the control panel.

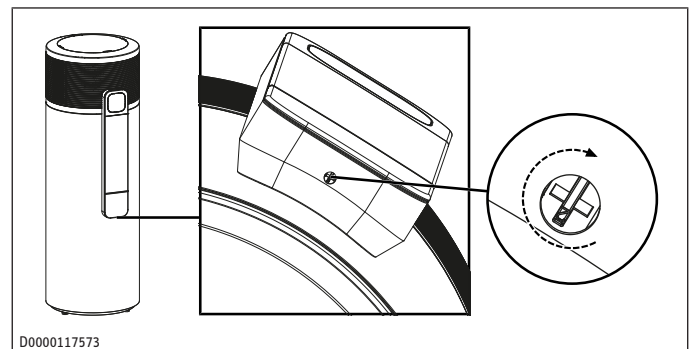

- ▶ Push the control panel cover down slightly and remove it.

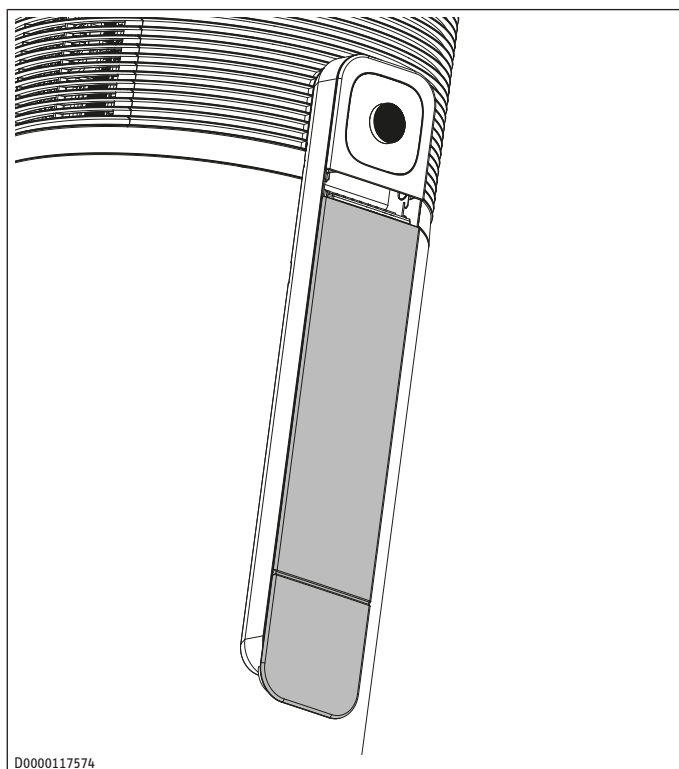

- Prepare the electric cables so that each cable terminates with a wire ferrule.
- Push the cables through one of the cable entries in the appliance casing.
- Route cables and leads through the strain relief fittings.
- Remove the jumper which leads from XD20/N to XD20/2 in the delivered condition.
- Remove the jumper which leads from XD20/L to XD20/1 in the delivered condition.

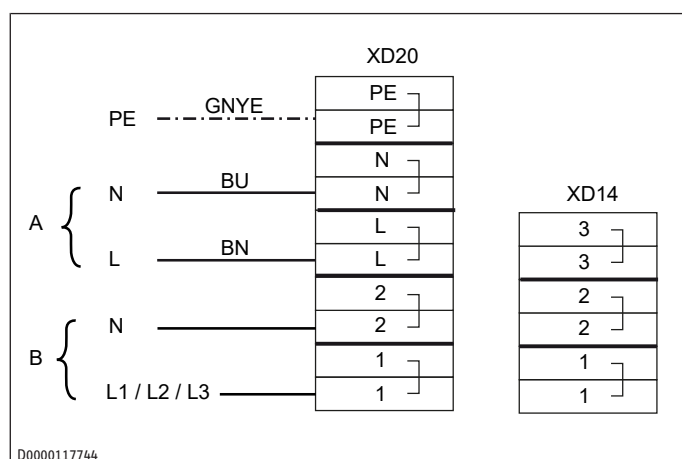

- Minimum runtime and minimum pause time**
- When operating with external switching devices that can interrupt the power supply to the appliance, such as time switches, energy management systems or home automation systems, the following conditions must be adhered to:

- The minimum runtime is 20 minutes.
- The minimum pause time following a shutdown is 20 minutes.
- Do not switch the appliance on or off more than 10 times a day using an external switching device.
- The contact load capacity of the switching actuator must satisfy the fuse protection requirements according to the data table.

Closing and locking the control panel

- Replace the control panel cover.
- Lock the control panel.

8.2.3 Connection variant: Operation with external signal transmitter

Set temperature 1 is the standard set temperature.


Set temperature 2 is preset but inactive. If an external switching signal is present for at least one minute, set temperature 2 is activated and is valid for at least 20 minutes.

As long as the external switching signal is present, set temperature 2 is higher than set temperature 1.

The compressor switches off when the external switching signal is cancelled or the selected set temperature is reached. The compressor remains switched off for a minimum idle time of 20 minutes. Afterwards, the selected set temperature 1 becomes higher ranking again.

Example:

- Water temperature = 62 °C
- Set temperature 1 = 61 °C
- Set temperature 2 = 65 °C

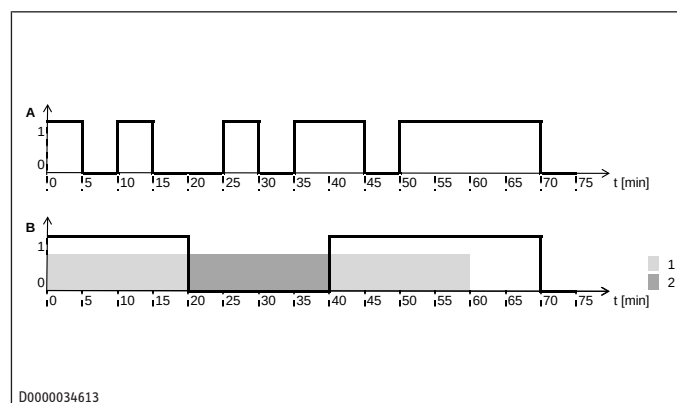

- Legend:**
- A External signal
 - B Compressor
 - 1 20 min. minimum runtime, set temperature 2
 - 2 20 min. minimum compressor pause time

SG Ready

The switching contact can be used to specify an additional set value.


The power supply utility (PSU) can activate the following operating modes, e.g. for load redistribution in the event of a power shortage:

- SG Ready Status 1: Standby
- SG Ready Status 2: Comfort mode (standard mode)
- SG Ready Status 3: Switch-on recommendation of the PSU to a higher set value
- SG Ready Status 4: Obligation to control the appliance and use set value 2


When the power supply utility activates the appliance, the symbol for the "SG Ready" function lights up on the appliance.

Connecting an external signal transmitter

- Release the lock on the underside of the control panel.

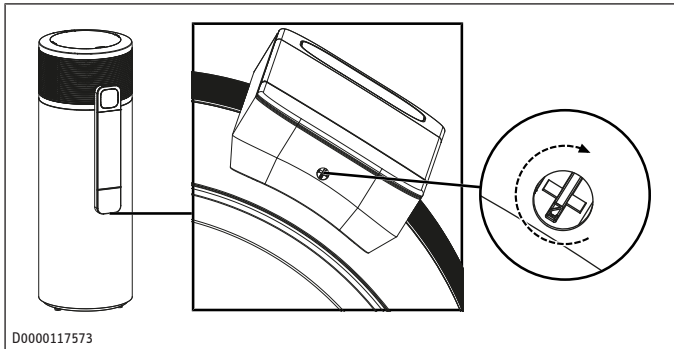


- Push the control panel cover down slightly and remove it.

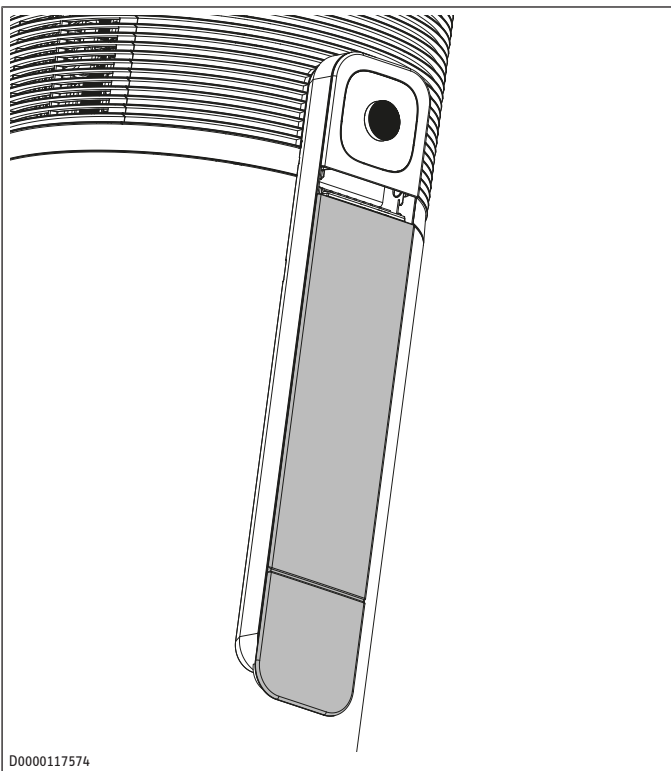

- Push the cables through one of the cable entries in the appliance casing (b01).
- Route cables and leads through the strain relief fittings.
- To switch a separate set temperature (set temperature 2), connect the cables of the external signal transmitter to the terminals XD14/1-2 and XD14/N.
- **NOTICE: If the voltage is too high, this can damage the appliance. Observe the permissible voltage range for external signal transmitters.** Apply voltage to the terminal:
 - Voltage between XD14/1 and XD14/N = SG Ready Status 3
 - Voltage between XD14/2 and XD14/N = SG Ready Status 1
 - Voltage between XD14/1 and XD14/N and voltage between XD14/2 and XD14/N = SG Ready Status 4

Example 1: Power-OFF signal with own phase

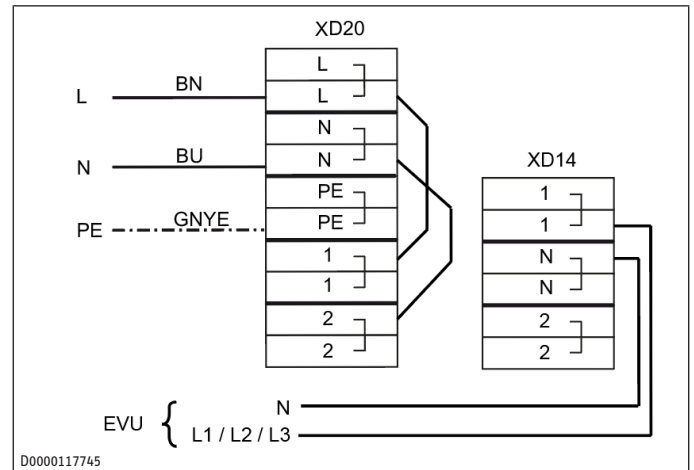


PSU Power supply utility
 BN brown
 BU blue
 GNYE Green/yellow

Example 2: Photovoltaic signal via on-site relay and phase routed outside the appliance

The relay in the inverter must meet the following requirements:

- Potential-free relay (240 V AC / 24 V DC, 1 A) with N/O contact
- Adherence to safety regulations and standards for safety extra low voltage
- The switching output must be programmed so that the relay closes or opens if certain limits are exceeded or undershot (inverter output level).

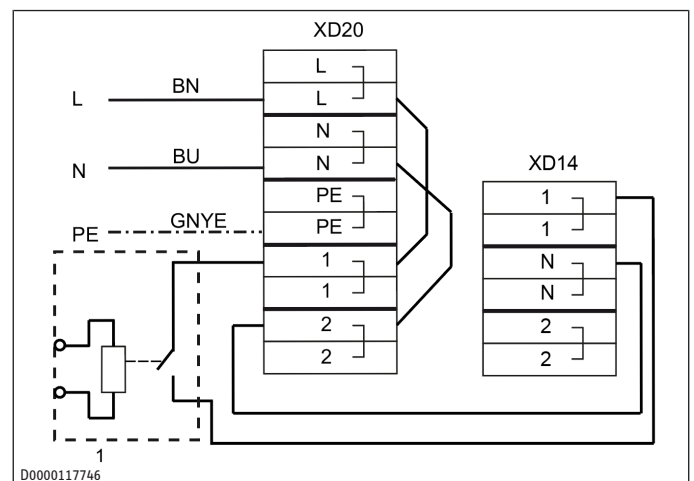

1 Inverter (floating contact)
 BN brown
 BU blue
 GNYE Green/yellow

The inverter power feed is usually located at a central distribution point (e.g. in the main fuse box).

Closing and locking the control panel

- Replace the control panel cover.
- Lock the control panel.

8.3 Function test

- Switch the mains power supply on.
- Check whether the heat pump heats the water.
 - ⇒ During the heat-up process, expansion water will drip from the safety valve.

8.4 Recommissioning

If the heat pump is switched off by an interruption to the power supply and the power supply is subsequently restored, no measures are required to restart it.

Following an interruption to the power supply, compressor operation remains blocked for at least one minute. The PCB delays the electrical start-up by one minute, during which the appliance initialises. If the compressor subsequently fails to start, it may be locked out by additional safety devices (motor overload relay and high pressure switch). This block should lift after 1 to 10 minutes.


The heat pump will have saved the parameters most recently set and will continue operating with them.

9 Operation

9.1 Display and controls

The appliance can be operated via the app, or via the rotary selector and the buttons on the appliance.

If you switch the rotary selector from the WLAN symbol to a set temperature, operation via the app is no longer possible. The set temperature selected with the rotary selector assumes a higher priority than the set temperature in the app.

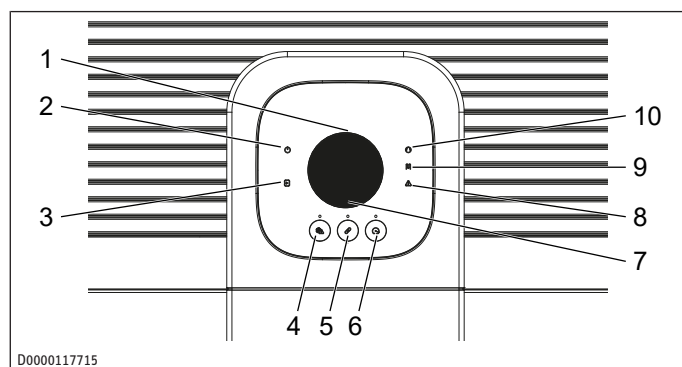

- | | |
|---------------------------------------|---------------------------|
| 1 Appliance status | 2 Standby |
| 3 SG Ready | 4 "Emergency mode" button |
| 5 "Pairing" button | 6 "Rapid heat-up" button |
| 7 Rotary selector | 8 Fault |
| 9 Electric emergency/auxiliary heater | 10 Compressor |

Symbols

Symbol	Meaning
	- off Appliance inactive
	- flashing Appliance in initialisation phase
	- on Appliance active
	- Off No heating demand to the compressor

Symbol	Meaning
	- Flashing Heating demand to the compressor, but the compressor is not (yet) active
	- On Compressor active
	Electric emergency/auxiliary heater
	- Off No heating demand to the electric emergency/auxiliary heater
	- Flashing Heating demand to the electric emergency/auxiliary heater, but the electric emergency/auxiliary heater is not (yet) active
	- On Electric emergency/auxiliary heater active
	Fault
	- Off No fault
	- Flashing See chapter <i>Troubleshooting</i> [► 14].
	- On See chapter <i>Troubleshooting</i> [► 14].
	Rapid heat-up
	- Off Rapid heat-up inactive
	- On Rapid heat-up active
	Pairing
	- Off WLAN function inactive
	- Flashing slowly Access point mode requested
	- Flashing rapidly Access point mode active
	- On WLAN connection established
	Emergency mode
	- Off Emergency mode inactive
	- Flashing Emergency mode active
	SG Ready
	- Off No external signal
	- On SG 1.0 is active.
	- Flashing SG 2.0 is active.
	Standby
	- Off Appliance active, frost protection guaranteed
	- Flashing slowly Frost protection active, SG Ready function active
	- Flashing rapidly Load shedding
	- On Frost protection active

Keypad lock

- The keypad lock can be activated and deactivated via the app.

9.2 Pairing the heat pump with the app

- ✓ Secure Wi-Fi® network (802.11b/g/n/ 2.4 GHz, DHCP)
- ✓ Supported encryption methods: WPA™ PSK, WPA2™ PSK, WPA3™ PSK
- ✓ Internet connection to the mobile device
- ✓ Location sharing of the mobile device active
- ✓ Operating system of the mobile device: iOS® version 12.0 or higher, Android® version 8.0 or higher
- ✓ The requirements specified in the App Store® or Google Play Store™ for installing and using the app are satisfied
- ✓ Mobile device no more than 3 m away from the heat pump during pairing
- ▶ Download the app to your mobile device from the Apple App Store® or Google Play Store™.
 - App for installers: Servicewelt app
 - App for operators: MyStiebel app
- ▶ Register in the app.
- ▶ Grant the app the necessary authorisations.
- ▶ Add a new appliance in the app and follow the instructions.

9.3 Activating/deactivating rapid heat-up

Application

- One-off demand for extra hot water

Activating rapid heat-up on the programming unit

- ▶ Press the "Rapid heat-up" button for 2 seconds.
- ⇒ The "heat pump" and "electric emergency/auxiliary heater" symbols are shown until the function has ended. The heat pump and electric emergency/auxiliary heater are started once in parallel operation.
- ⇒ When the water temperature rises by a hysteresis value above the set temperature on the cylinder top sensor, the electric emergency/auxiliary heater is switched off (rapid heat-up). The electric emergency/auxiliary heater remains in standby mode until the set temperature has been reached throughout the DHW cylinder (comfort heat-up). A flashing "electric emergency/auxiliary heater" symbol indicates that the electric emergency/auxiliary heater is in standby mode.

Deactivating rapid heat-up on the programming unit

- ▶ To end the function prematurely, press the "Rapid heat-up" button for 2 seconds.

10 Settings

Implement the required settings in the respective app:

- App for installers: Servicewelt app
- App for operators: MyStiebel app

11 Cleaning

Component	Interval
Casing	As required
Air intake grille	if required, every 6 months
Air outlet grille	Adapt the interval according to the air quality and the installation conditions, e.g. if a tumble dryer releases dust at the installation site.

Component	Interval
Condensate drain	As required, for the first time after 1 year Adapt the interval according to the installation conditions.
Taps	As required
Safety valve	

11.1 Cleaning the casing top

- ▶ Clean the casing top with a cloth moistened with water.

11.2 Cleaning the condensate drain

- ▶ Remove the condensate drain bend.
- ▶ Remove any dirt from the connection for the condensate drain.

11.3 Dissolving scale build-up

Almost every type of water will deposit limescale at high temperatures. Limescale will settle inside the product and affect its function and service life.

A qualified contractor who is aware of the local water quality will tell you when the next descaling is due.

- ▶ Check the taps regularly. Use commercially available descaling agents to remove limescale from the tap spouts.
- ▶ Regularly activate the safety valve to prevent it from becoming blocked, e.g. by limescale deposits.


12 Cleaning (qualified contractors)

Component	Interval
Evaporator	if required, for the first time after 1 year Adapt the interval according to the air quality and installation conditions, e.g. if a tumble dryer releases dust at the installation site.

12.1 Cleaning the evaporator

Casing cover removal

- ▶ Isolate the appliance from the power supply.
- ▶ Undo the fixing screw on the casing cover.

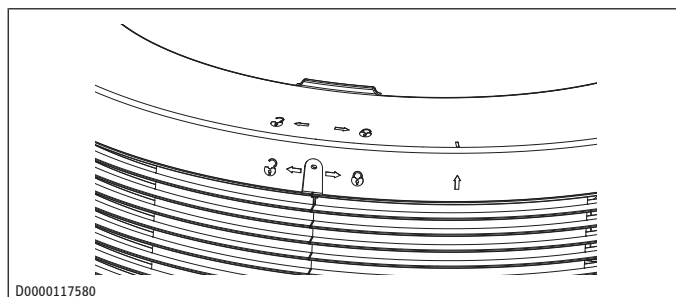


- ▶ To do this, turn the casing cover clockwise.
- ▶ Remove the casing cover.
- ▶ Remove the insulation.


Removing the side casing (only if the ceiling height is insufficient)

If the ceiling height does not provide sufficient working space, carry out the steps in this chapter. Otherwise, continue with the steps in the following chapter.

- Undo the fixing screws on the side casing.

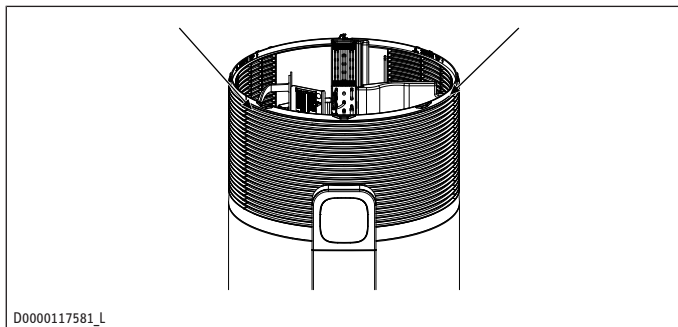

- Lift up and remove the front side casing from the guide rail.
- Slide the right side casing in the guide rail a little in a clockwise direction and remove the side casing from the guide rail.
- Slide the left side casing in the guide rail a little in an anti-clockwise direction and remove the side casing from the guide rail.

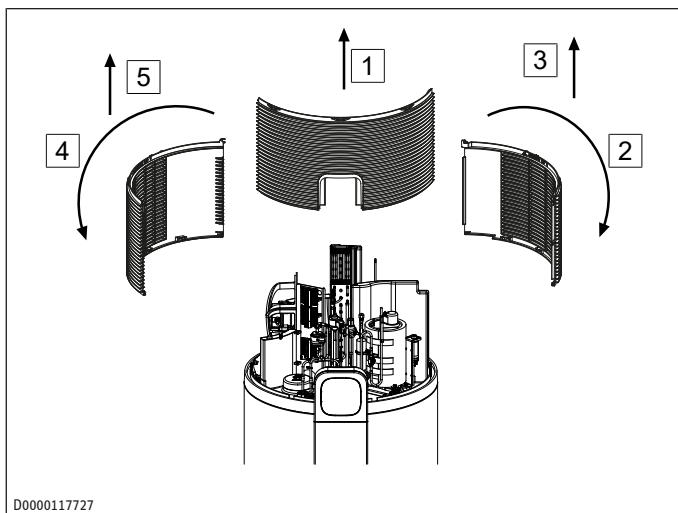


Cleaning the evaporator


- **WARNING: The sharp-edged fins of the evaporator can cause injury. Wear protective gloves.** Clean the evaporator fins with water and a soft brush.

Installing the side casing

- Insert the left side casing in the guide rail and slide the side casing clockwise in the guide rail.
- Insert the right side casing in the guide rail and slide the side casing anti-clockwise in the guide rail.
- Insert the front side casing in the guide rail.

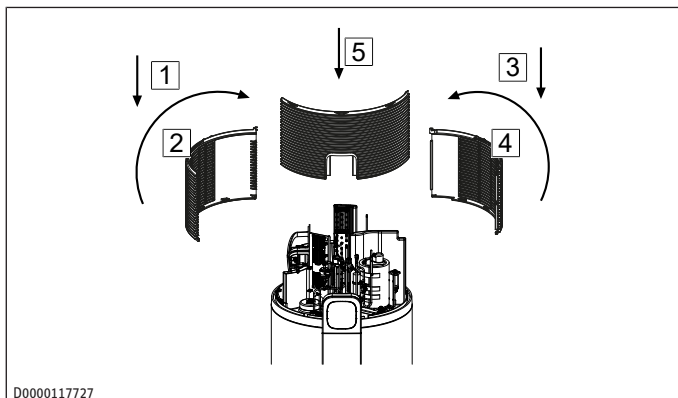


- Install the side casing.

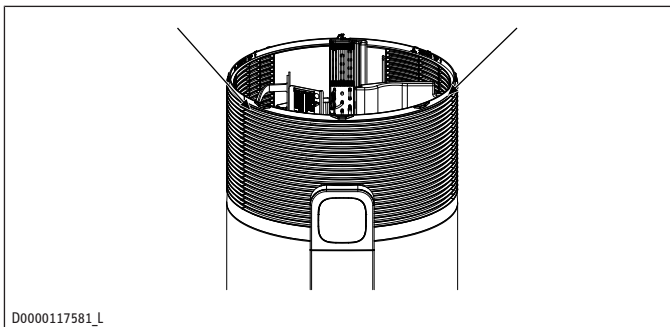

Casing cover installation

- Fit the insulation.
- Place the casing cover on the appliance.
- Turn the casing cover anti-clockwise so that it latches in place.

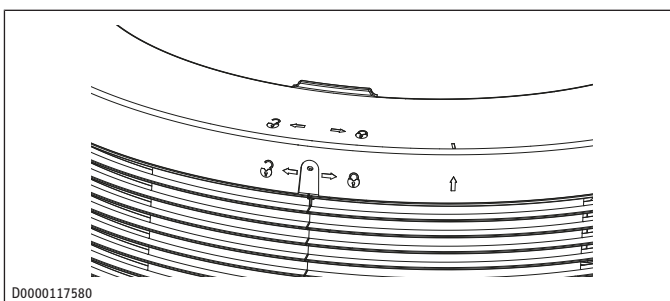

- Tighten the screw in the back of the casing cover.

13 Troubleshooting

- Please also observe the notifications in the Servicewelt app.

Fault	Possible cause	Remedy
The appliance does not supply hot water.	The appliance has no power.	► Check that the appliance is connected to the power supply.
The appliance does not supply hot water.	A fuse/MCB in the distribution board has blown/tripped.	► Check whether the fuses/MCBs in the distribution board have blown/tripped. ► If necessary, isolate the appliance from the power supply. ► Reconnect the appliance to the power supply. ► Replace the fuses/reset the MCBs. ► Contact a qualified contractor if the fuse/MCB blows/trips again after the appliance is

Fault	Possible cause	Remedy
		connected to the power supply.
The appliance does not supply hot water.	The air intake grille or air outlet grille is blocked.	► Remove dirt or other blockages to ensure clear intake and outlet air flows.
The appliance does not supply hot water.	Below this application limit the appliance efficiency and output decrease. The heat-up time is extended.	No action required
The appliance does not supply hot water or the "compressor" symbol is flashing.	The temperature of the intake air is outside the application limits. The compressor was switched off/locked automatically.	No action required The appliance heats the water using the electric emergency/auxiliary heater. As soon as the temperature is back within the application limits, the heating process is continued with the compressor.
The appliance does not supply hot water.	Hot water was recently drawn off and the appliance has not yet been able to reheat the water in the DHW cylinder.	No action required ► Let the appliance complete the heat-up process.
The safety valve of the DHW cylinder is dripping.	The appliance cylinder is at mains water pressure. During heat-up, expansion water may drip from the safety valve.	► If water continues to drip after heat-up has stopped, inform a qualified contractor.
The condensate drain drips.	The surface temperature of the evaporator is lower than the dew point temperature of the ambient air. This results in condensate forming. The amount of condensate depends on the humidity level of the ambient air.	No action required
The room temperature drops.	Operation of the appliance can cause the room temperature to fall by several degrees, as the appliance extracts energy from the air.	► If the room temperature falls by more than 5 °C, check that the room size is sufficient. Supplying energy by opening a door to another room will remedy this.
The power consumption is unusually high.	The lower the intake temperature, the lower the heat pump efficiency.	► In order to reduce power consumption, where possible avoid high set temperatures and the use of rapid heat-up.

Fault	Possible cause	Remedy
		► Check whether the electric emergency/auxiliary heater is active.
The "fault" symbol is continuously illuminated.	Category 3 faults	A continuously illuminated "fault" symbol indicates that a fault has occurred, but the heat pump is heating nevertheless. ► Notify a qualified contractor. The qualified contractor can find more information on troubleshooting in the Servicewelt app.
The "fault" symbol flashes.	The compressor is locked out.	A flashing "fault" symbol indicates that a fault has occurred, but the heat pump is heating nevertheless. ► Notify a qualified contractor. The qualified contractor can find more information on troubleshooting in the Servicewelt app.
The compressor is switched off; the fan continues to run. The "compressor" symbol is shown.	The appliance is in defrost mode.	No action required
The "compressor" symbol is flashing.	There is a heat demand, but the compressor is locked out.	No action required The compressor restarts automatically after the compressor lockout time has elapsed. The symbol stops flashing automatically.
The "electric emergency/auxiliary heater" symbol is flashing.	A temperature controller has switched off the electric emergency/auxiliary heater during rapid heat-up.	No action required The appliance continues the rapid heat-up process using the heat pump. When the controller enables the electric emergency/auxiliary heater again, the symbol stops flashing. The symbol goes out when the temperature throughout the DHW cylinder reaches the set rapid heat-up temperature.
The "electric emergency/auxiliary heater" symbol is illuminated but the	The electric emergency/auxiliary heater lights up when there is a demand. The internal controller of the	► Notify a qualified contractor.

Troubleshooting (qualified contractors)

Fault	Possible cause	Remedy
electric emergency/auxiliary heater is not active.	electric emergency/auxiliary heater may have ended electric heating. A possible cause may be a fault in the electric emergency/auxiliary heater. A possible cause may be that the high limit safety cut-out has responded.	
Smell	No water in the siphon	► Fill the siphon with water.

- If you cannot remedy the fault, contact your qualified contractor.
- To facilitate and speed up your enquiry, please provide the qualified contractor with the number from the type plate.

The type plate is located next to the power cable.

Available amount of DHW

If the amount of DHW is insufficient, this may be due to the following:

- The individual DHW demand is above average.
- The recommended number of users has been exceeded.
- The pipes, valves or water connections are insufficiently insulated.

13.1 Activating/deactivating emergency heating mode

Activating emergency heating mode

- Press the "Emergency mode" button for on the programming unit for 2 seconds. Alternatively, activate emergency mode in the MyStiebel app.
 - ⇒ The current set temperature is ignored. In emergency heating mode, the appliance operates with a fixed set temperature. In the upper cylinder section, the DHW is heated up to 65 °C by the electric emergency/auxiliary heater.
 - ⇒ Emergency heating mode remains activated for 7 days.
- If you want to extend emergency heating mode by a further 7 days, press the "Emergency mode" button again. Alternatively, extend the emergency mode time in the MyStiebel app.
 - ⇒ From this point on, emergency heating mode remains activated for 7 days.

After a power interruption

Emergency heating mode remains active after an interruption to the power supply.

Deactivating emergency heating mode

- Press the "Emergency mode" button for on the programming unit for 2 seconds. Alternatively, deactivate emergency mode in the MyStiebel app.

14 Troubleshooting (qualified contractors)

- Please also observe the notifications in the Servicewelt app.


Fault	Possible cause	Remedy
The appliance does not supply hot water.	The appliance has no power. The power cable is damaged.	► WARNING: Only qualified contractors authorised by the manufacturer are permitted to replace the power cable (connection type X). Replace the power cable.
The compressor is no longer working.	The motor overload relay has responded because the temperature or current was too high for the compressor.	► Eliminate the cause that led the motor overload relay to respond. ⇒ After a short cooling period, the motor overload relay will restart the compressor automatically.
The compressor is no longer working.	There was no pressure equalisation in the refrigerant circuit, so the compressor is operating against a high pressure. An electronic expansion valve is faulty.	► Start a calibration run in the Servicewelt app. Alternatively: ► Isolate the appliance from the power supply. ► Reconnect the power supply.

14.1 Resetting the high limit safety cut-out


If the temperature of the cylinder water 89 °C exceeds +0/-8 °C, the high limit safety cut-out switches off the electric emergency/auxiliary heater. These high temperatures can be caused by a defective heating element or a fault in the electronics, for example.

The high limit safety cut-out also responds in the event of frost.


- Remove the cause of the fault.
- Isolate the appliance from the power supply.
- Release the lock on the underside of the control panel.

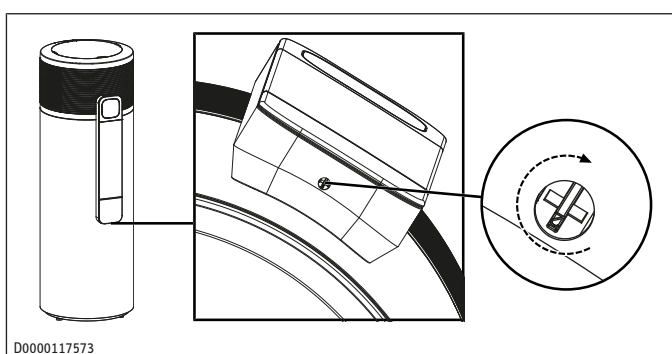

- Push the control panel cover down slightly and remove it.

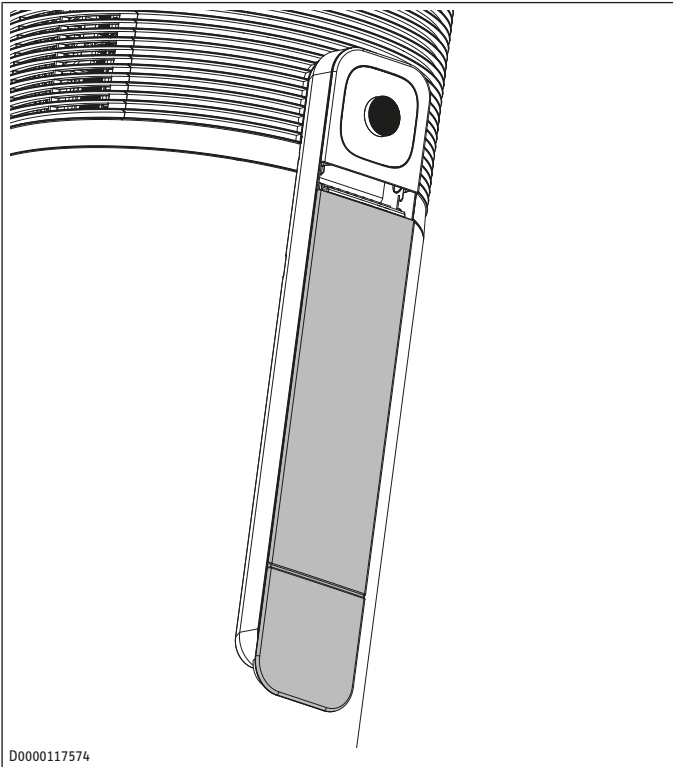

- Press the reset button on the safety cut-out.

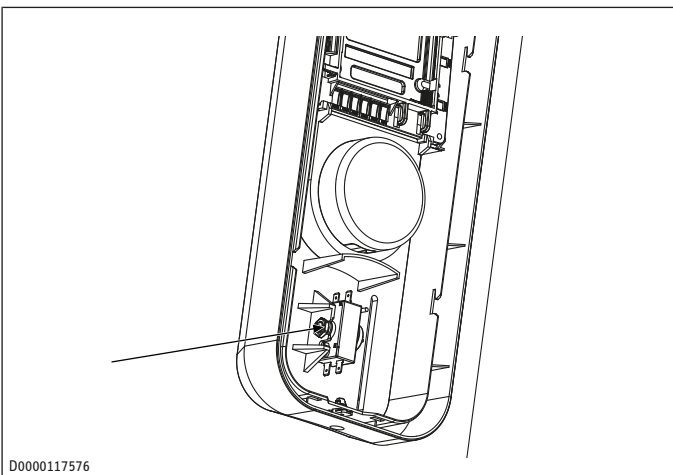

- If the high limit safety cut-out cannot be reset, replace it.
- Replace the control panel cover.
- Lock the control panel.
- Reconnect the appliance to the power supply.

14.2 Safety pressure limiter

If the pressure in the refrigerant circuit is too high, the safety pressure limiter interrupts the power supply to the compressor until the pressure in the refrigerant circuit falls below the set limit value. If the safety pressure limiter responds 5 times in 5 hours, compressor operation is blocked.


- Remove the cause of the fault.
 - ⇒ The appliance carries out pressure equalisation. This process takes a few seconds.
- When the pressure equalisation process is complete, unlock the heat pump in the Servicewelt app.

15 Maintenance (qualified contractors)


Component	Activity	Interval
Electric emergency/auxiliary heater	Descale the emergency/auxiliary heater to increase its service life.	For the first time after 1 year As required If necessary, shorten the interval depending on the water quality and the installation conditions.
Condensate drain	Check that the condensate drain is clear.	For the first time after 1 year As required If necessary, shorten the interval depending on the installation conditions.
Safety assembly	Check the safety assembly.	For the first time after 1 year As required If necessary, shorten the interval depending on the installation conditions.
Evaporator	Check the evaporator.	For the first time after 1 year As required If necessary, shorten the interval depending on the water quality and the installation conditions.
Valves (safety valve, pressure reducing valve, drain valve)	Check the valves for limescale deposits and damage.	For the first time after 1 year As required If necessary, shorten the interval depending on the water quality and the installation conditions.
Signal anode	Check the consumption indicator.	For the first time after 2 years As required If necessary, shorten the interval depending on the water quality and the installation conditions.

15.1 Descaling the electric emergency/auxiliary heater


- Empty the DHW cylinder (see chapter *Draining the DHW cylinder* [► 19]).
- Isolate the appliance from the power supply.
- Release the lock on the underside of the control panel.

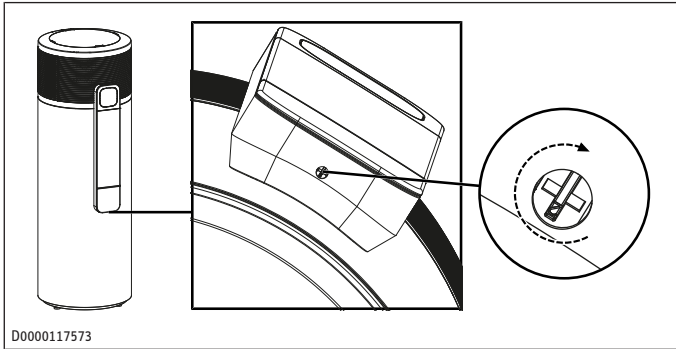


- Push the control panel cover down slightly and remove it.

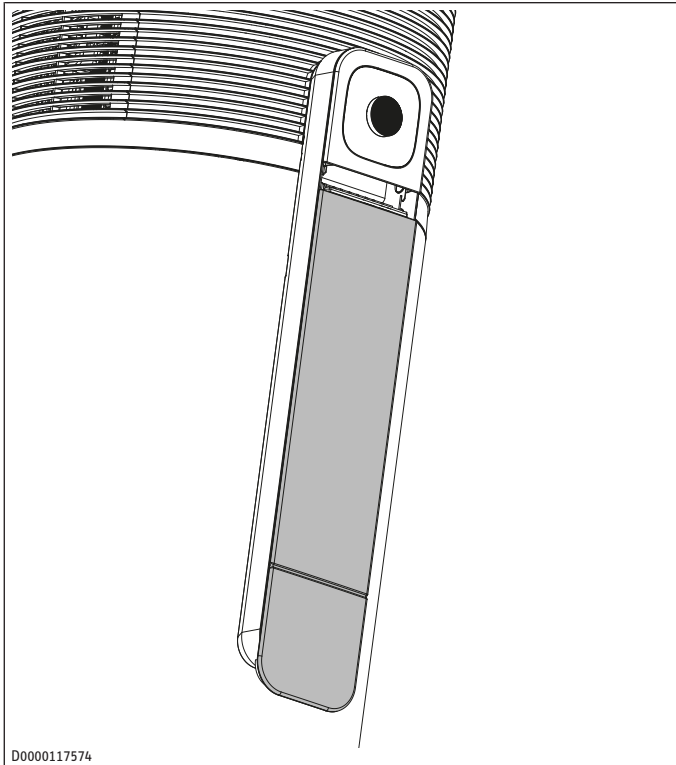

- Remove the insulation from the emergency/auxiliary heater.

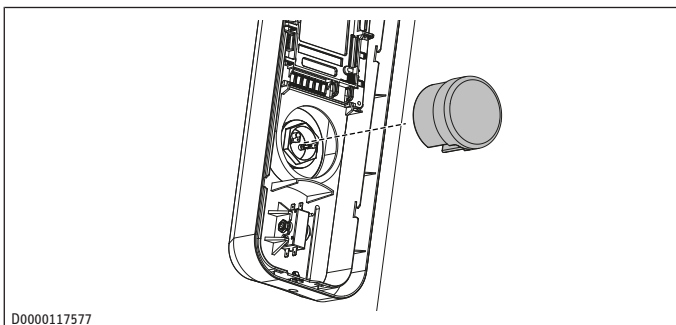

- Disconnect the electrical connection to the emergency/auxiliary heater.
- Remove the sensor bulb of the high limit safety cut-out from the sensor pocket.
- Unscrew the emergency/auxiliary heater from the cylinder connection piece.

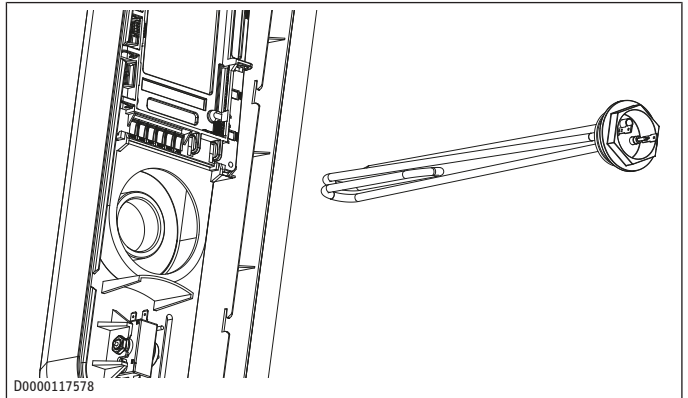

- Descale the heating element with a brush.
- Screw the emergency/auxiliary heater into the tank connection piece with the notch pointing upwards.
- Push the sensor bulb of the high limit safety cut-out into the sensor pocket.
- Re-establish the electrical connection of the emergency/auxiliary heater.
- Fit the insulation on the emergency/auxiliary heater.
- Replace the control panel cover.
- Lock the control panel.
- Refill the DHW cylinder (see chapter *Filling the DHW cylinder* [► 9]).
- Reconnect the appliance to the power supply.

15.2 Checking valves

- Regularly check the valves in the system to ensure the operational reliability of the appliance. The amount of limescale deposits depends on the local water quality.

The following valves should be included in the check:


- Safety valve
- Pressure reducing valve
- Drain valve
- Check that the valves are not scaled up or damaged.
- Remove any limescale deposits.
- Replace any faulty valves. Use valves recommended by us.
- Check the function of the valves.

15.3 Checking consumption indicator on signal anode

- Isolate the appliance from the power supply.


Removing the casing cover and side casing

- Undo the fixing screw on the casing cover.

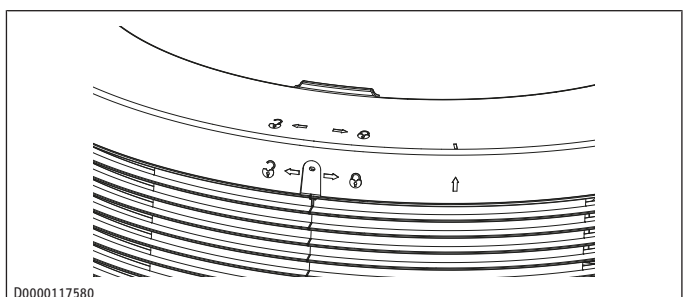

- To do this, turn the casing cover clockwise.
- Remove the casing cover.

- ▶ If the ceiling height does not provide sufficient working space, carry out the steps in this chapter. Otherwise, continue with the steps in the following chapter.
- ▶ Undo the fixing screws on the side casing.

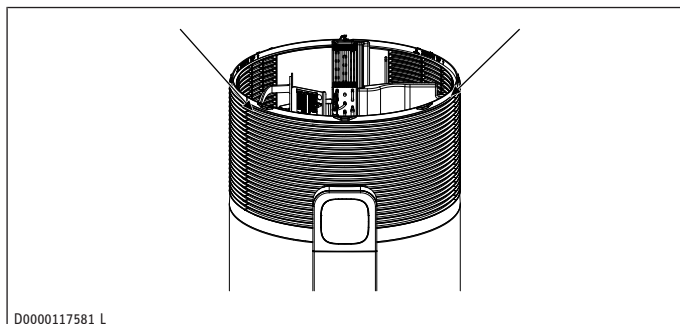


D0000117581_L

- ▶ Lift up and remove the front side casing from the guide rail.
- ▶ Remove the front insulation.

Checking consumption indicator on signal anode

- ▶ Check the consumption indicator of the signal anode.

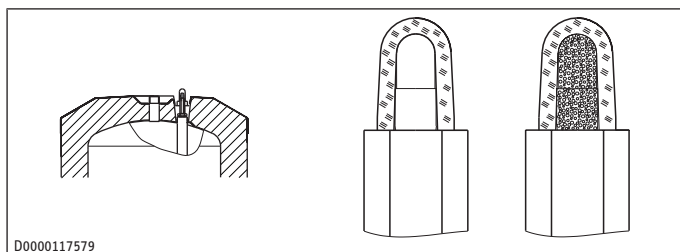


D0000117579

Consumption indicator colour	Meaning
white	Signal anode OK
Red	Signal anode depleted, replacement necessary

- ▶ Replace the signal anode if it is depleted. For this, ensure there is a good connection between the signal anode and the DHW cylinder (maximum transition resistance 0.3 Ω).

Installing the casing cover and side casing

- ▶ Install the side casing.
- ▶ Fit the insulation.
- ▶ Place the casing cover on the appliance.
- ▶ Turn the casing cover anti-clockwise so that it latches in place.

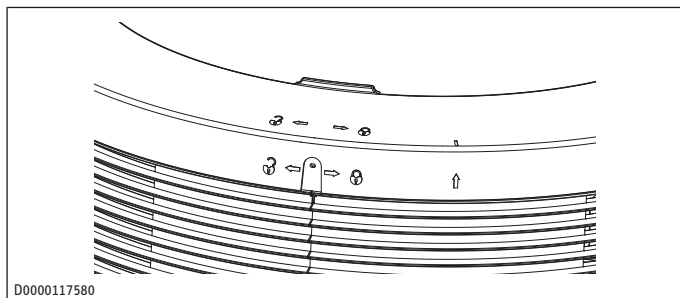

D0000117580

- ▶ Tighten the screw in the back of the casing cover.

15.4 Replacing the power cable

The power cable should only be replaced by a qualified contractor.

- ▶ If the power cable is faulty, replace it with a new power cable.

16 Shutdown (qualified contractors)

It is only possible to switch off the appliance by interrupting the power supply.

- ▶ Isolate the appliance from the power supply.

16.1 Draining the DHW cylinder


- ▶ Isolate the appliance from the power supply.
- ▶ Close the shut-off valve in the cold water inlet (c01).
- ▶ If there is no drain nearby, route a hose from the drain valve in the cold water inlet to the drain.
- ▶ **CAUTION: Keep your hands away from the outflowing hot water.** Open drain valve in the cold water inlet.
- ▶ **CAUTION: Keep your hands away from the outflowing hot water.** If no drain valve has been installed, disconnect the cold water supply line at the cold water inlet.
- ▶ To vent the heat pump, disconnect the DHW line connected to the DHW outlet (c06).

Some residual water will remain in the lower section of the DHW cylinder.

17 Specification

17.1 Dimensions and connections


17.1.1 SHP-I 200 Plus

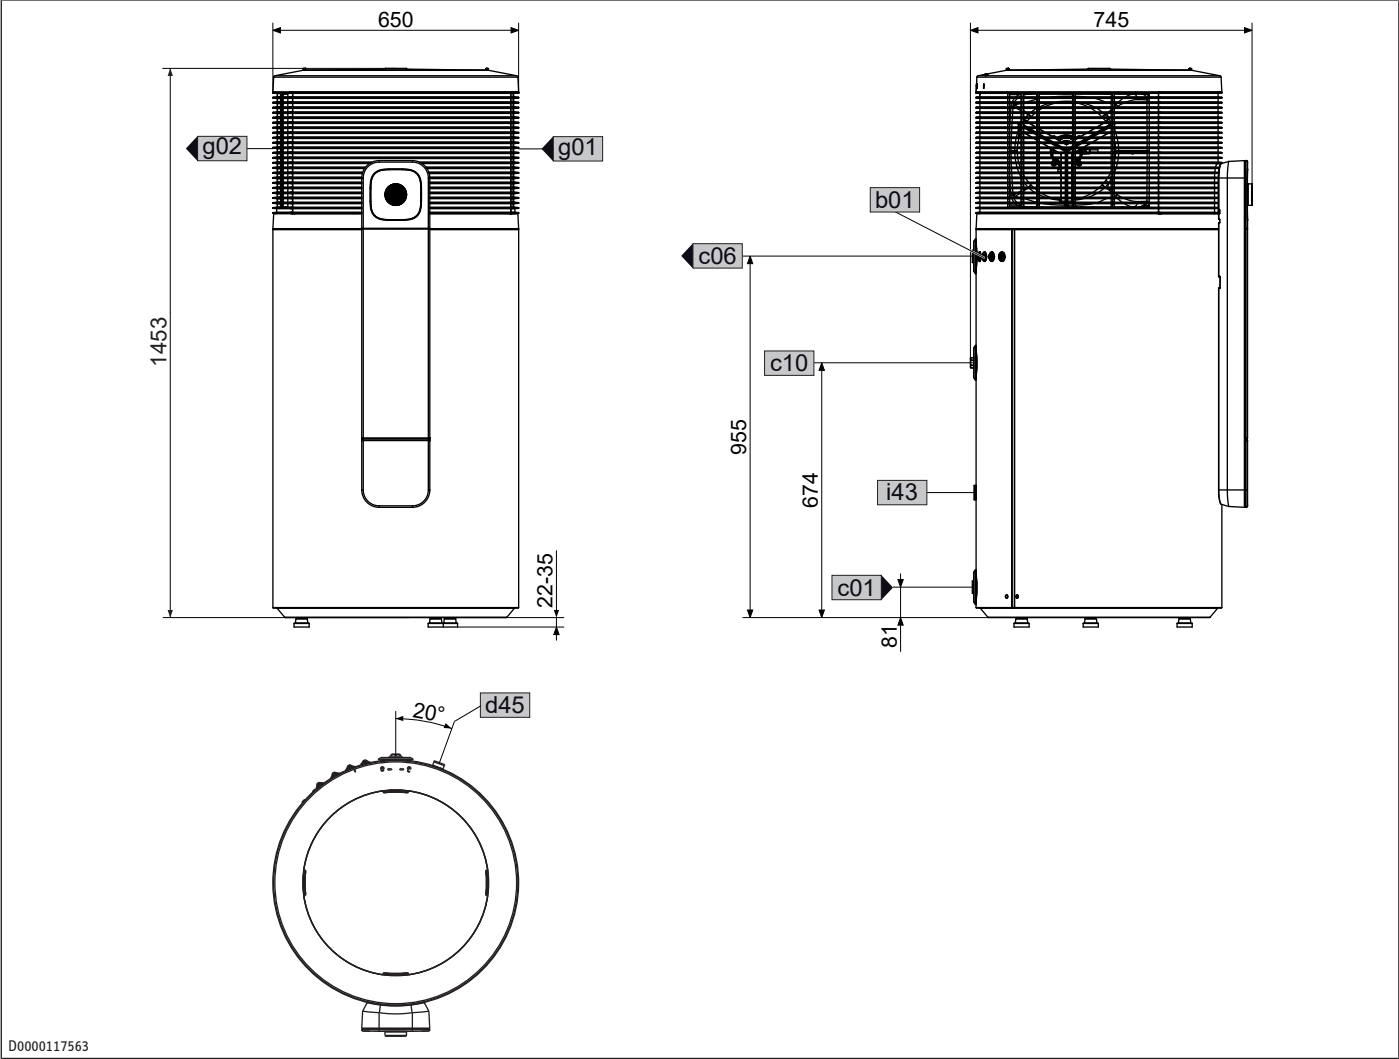

D0000117563

b01	Entry electrical cables		
c01	Cold water inlet	Male thread	G 1
c06	DHW outlet	Male thread	G 1
c10	DHW circulation	Male thread	G 1/2
d45	Condensate drain	Male thread	G 3/4
g01	Air intake		
g02	Air discharge		
i43	Cover for manufacturing aperture		


17.1.2 SHP-I 300 Plus

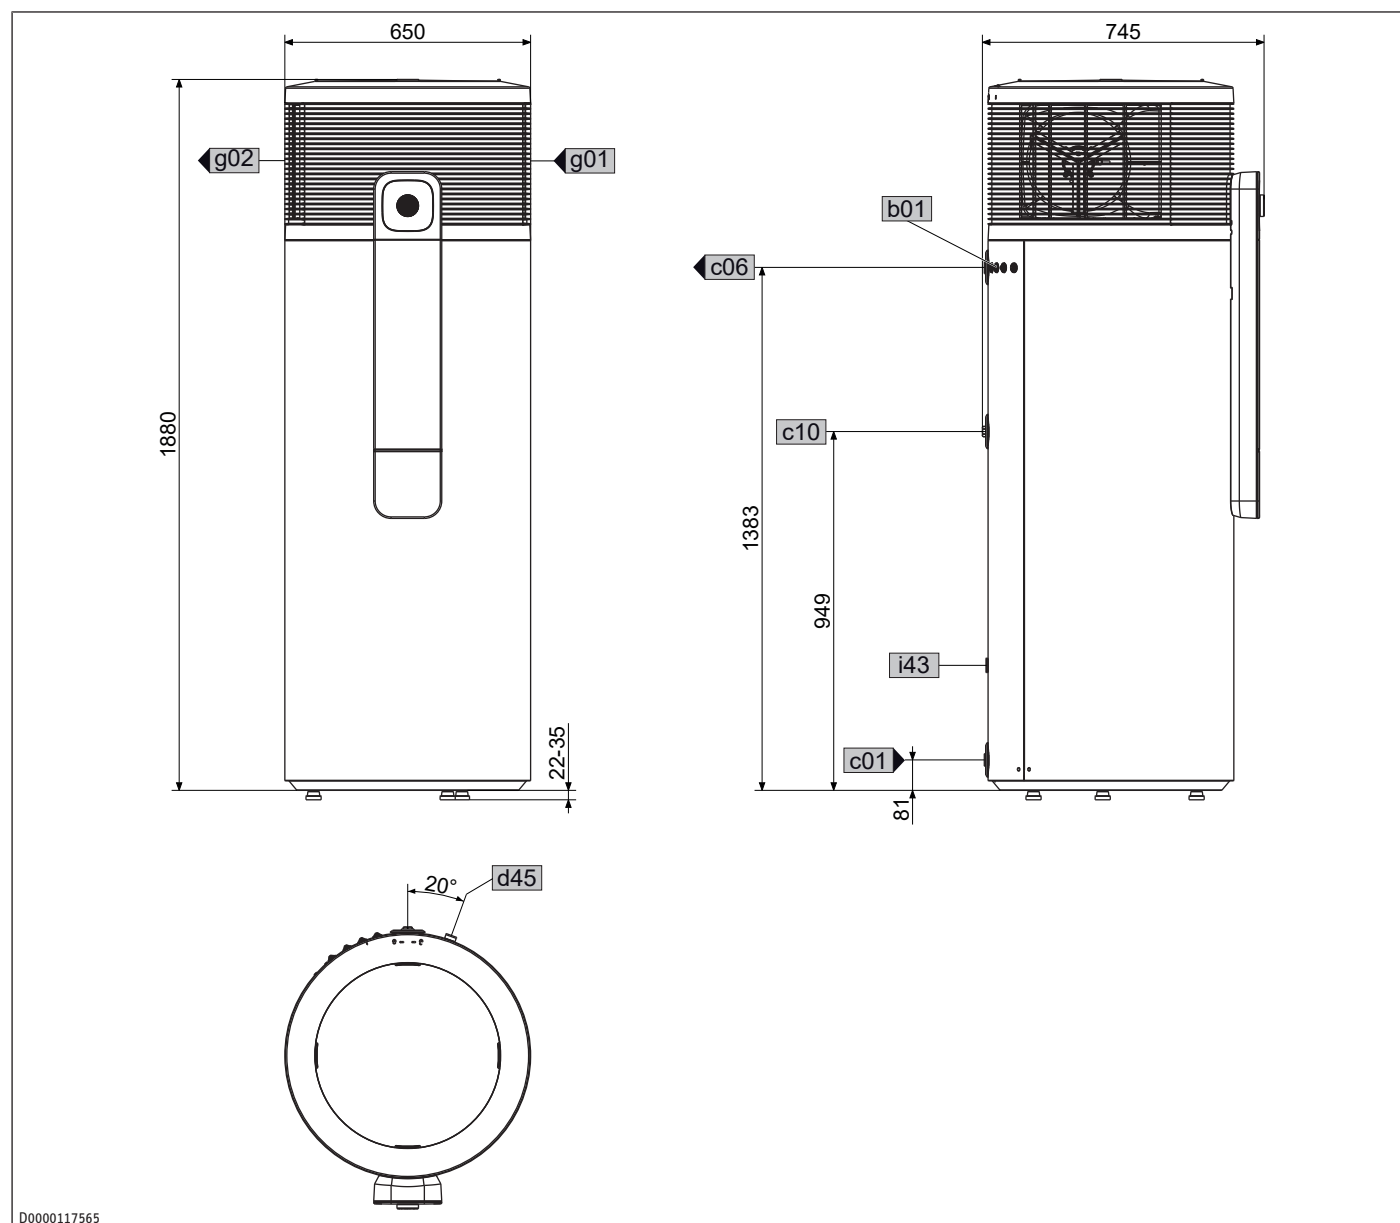

D0000117565

b01	Entry electrical cables		
c01	Cold water inlet	Male thread	G 1
c06	DHW outlet	Male thread	G 1
c10	DHW circulation	Male thread	G 1/2
d45	Condensate drain	Male thread	G 3/4
g01	Air intake		
g02	Air discharge		
i43	Cover for manufacturing aperture		

17.1.3 SHP-I 300 H Plus

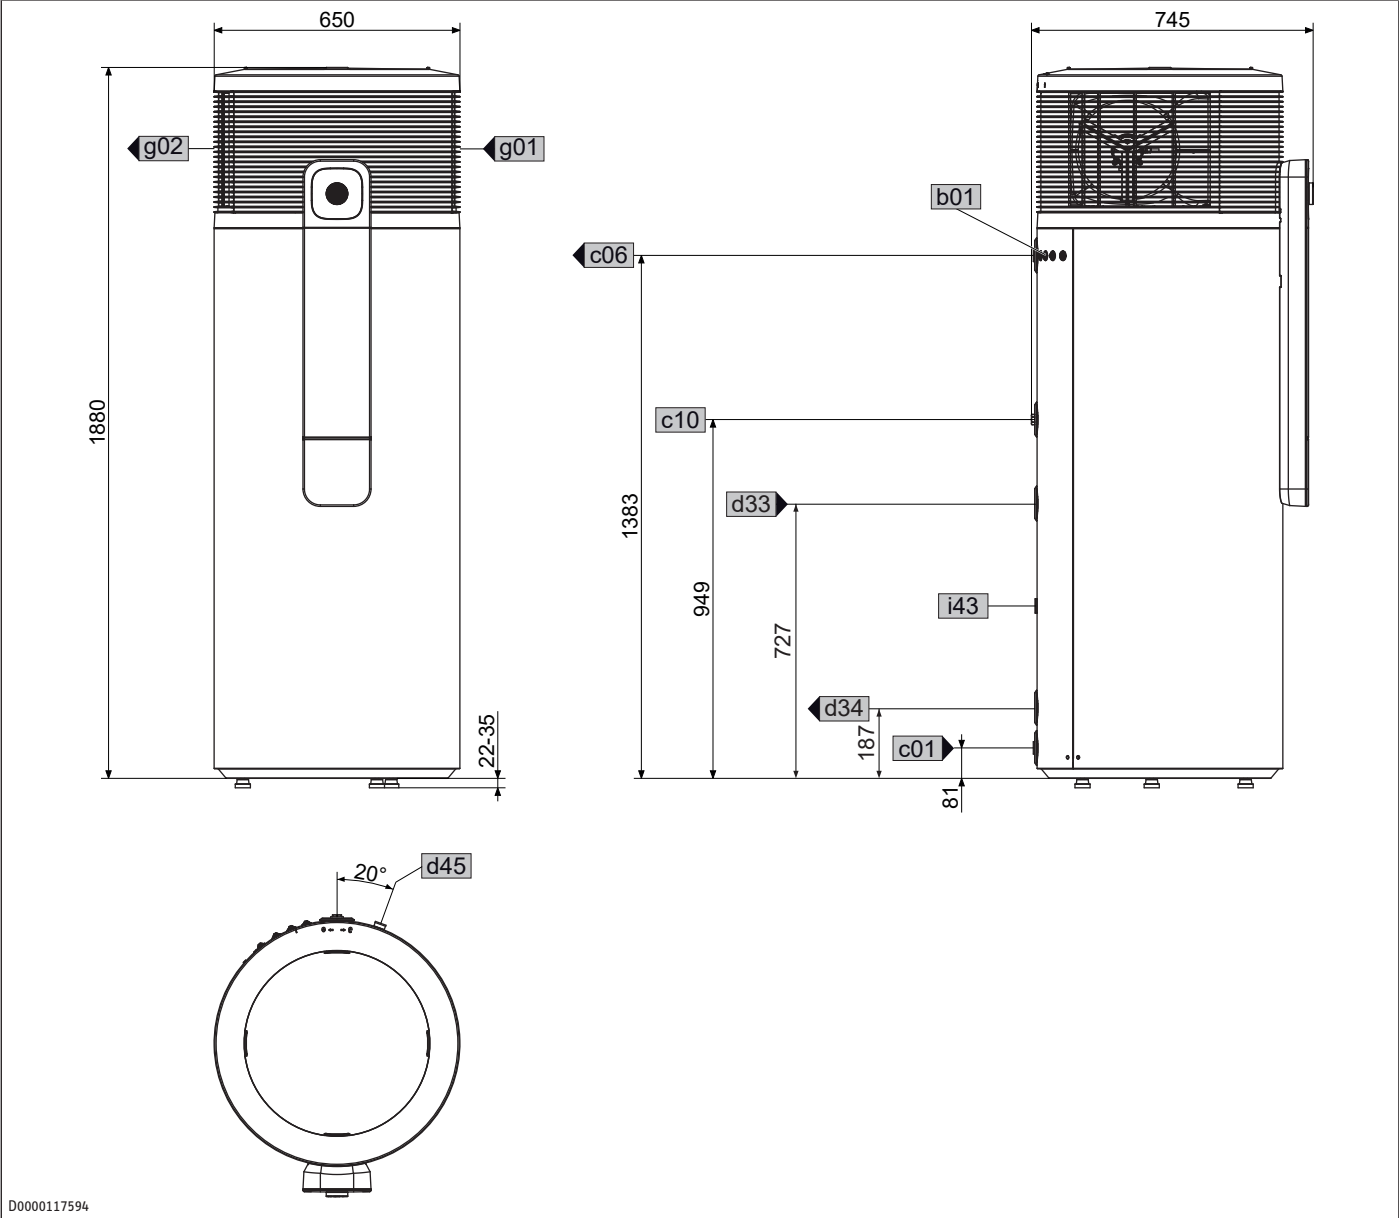


b01	Entry electrical cables		
c01	Cold water inlet	Male thread	G 1
c06	DHW outlet	Male thread	G 1
c10	DHW circulation	Male thread	G 1/2
d33	Heat generator flow	Female thread	G1
d34	Heat generator return	Female thread	G1
d45	Condensate drain	Male thread	G 3/4
g01	Air intake		
g02	Air discharge		
i43	Cover for manufacturing aperture		

17.2 Wiring diagram

AA02	Integral control unit 1 EB R.WWP
AA06	Programming unit
AA09	Wireless module
BP03	Pressure sensor, low pressure (16 bar)
BP05	Pressure switch, high pressure (31 bar)
BT21/22	Temperature sensor, cylinder top/integral
BT31	Temperature sensor, air intake
BT40	Temperature sensor, hot gas
BT45	Temperature sensor, evaporator discharge
BT55	Temperature limiter, high limit safety cut-out for emergency and auxiliary heater
BT58	Temperature sensor, fin array, evaporator
CA01	Run capacitor, compressor
EB08	Emergency and auxiliary heater
FA01	Internal motor overload relay

FC11	Fuse 1.25 A
FH800	Retainer for fuse
MA01	Compressor motor
M04	Motor, expansion valve
MA20	Motor, heat pump fan
S200	DIP switch
XD14	SG Ready terminal
XD20	Main connection terminal, internal
XD21	L block terminal
XD22	N block terminal
XD34	Sensor terminal
XD35	Control terminal
XD36	Actuator terminal
XD37	Adaptor terminal
XE17	Earth terminal, cylinder, internal
XE19	Earth stud, terminal plate
XE20	Earth stud, casing

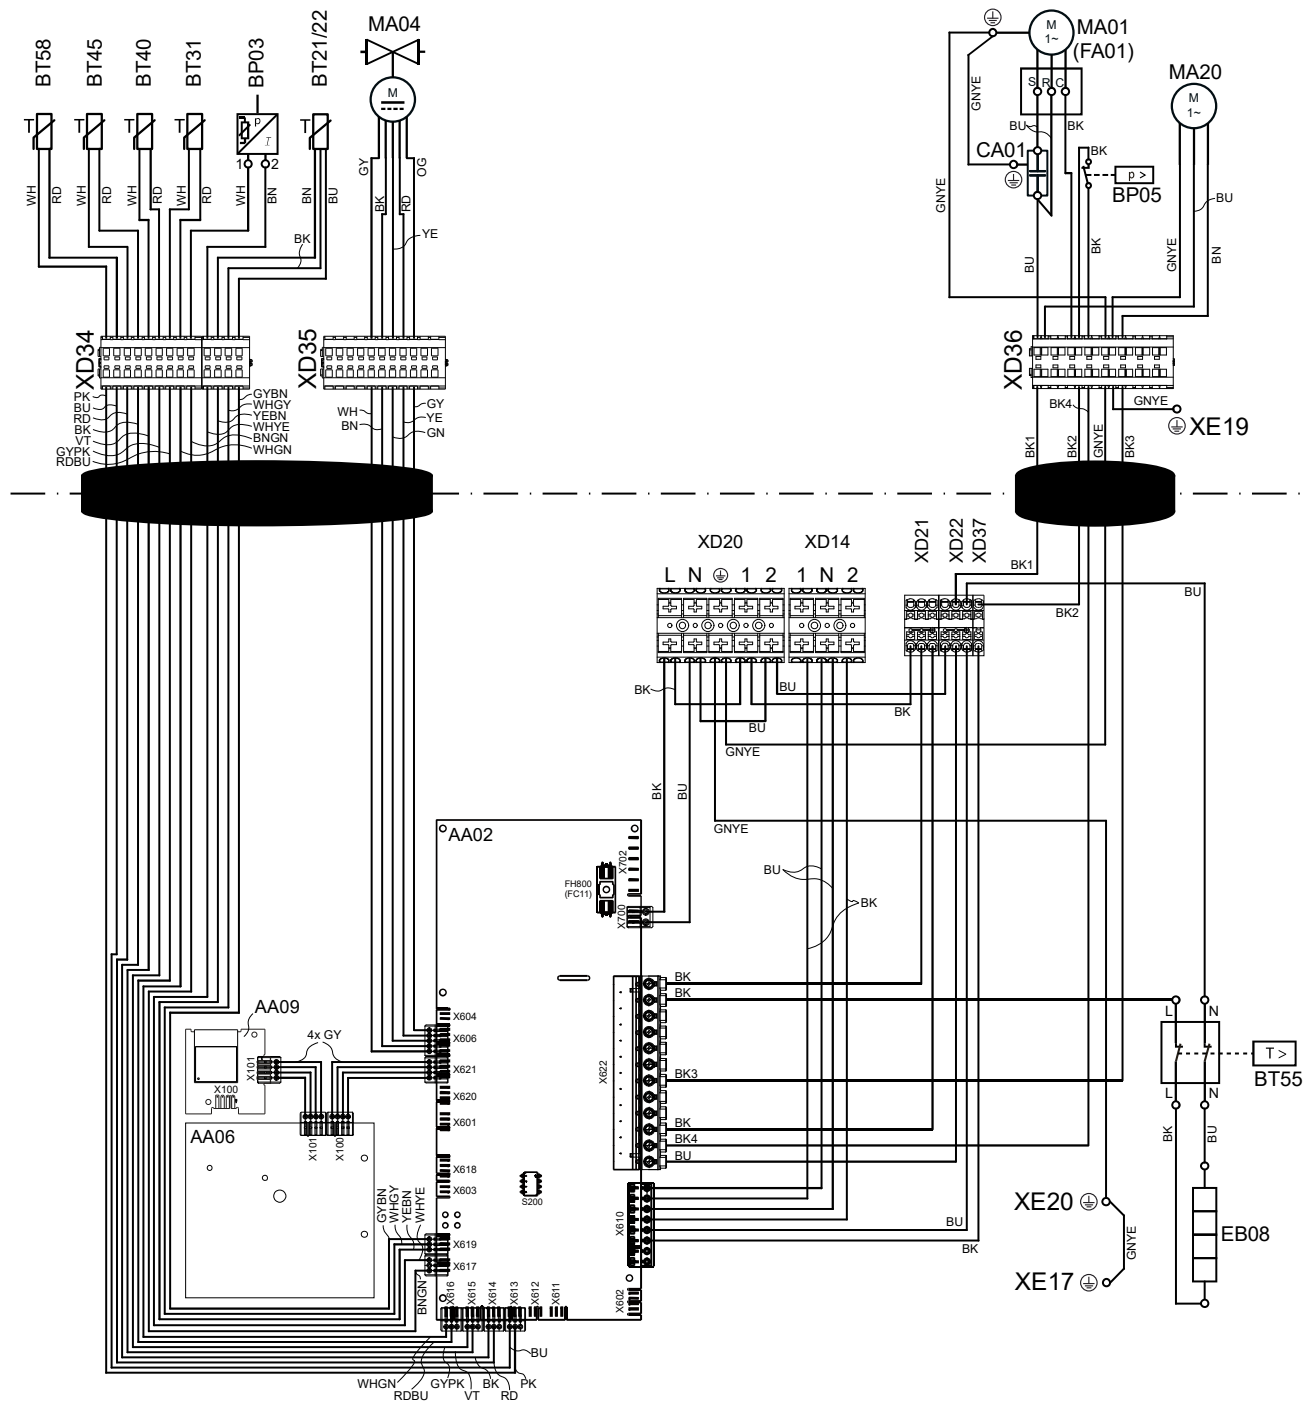

D0000094114

17.3 Data table

		SHP-I 200 Plus	SHP-I 300 Plus	SHP-I 300 H Plus
		204474	204476	204478
Height	mm	1478	1903	1903
Weight	kg			
Diameter	mm	650	650	650
Air flow rate	m ³ /h			
Power consumption, emergency/auxiliary heater	kW	1.50	1.50	1.50
Max. operating current	A	9.88	9.88	9.88
DHW temperature with heat pump	°C	65	65	65
Height when tilted, incl. packaging	mm	1798	2197	2197
Max. starting current	A	19.08	19.08	19.08
Power cable length approx.	mm	2000	2000	2000
Max. permissible operating pressure, cold water/DHW	MPa	0.85	0.85	0.85
Global warming potential of the refrigerant (GWP100)		0.02	0.02	0.02
Max. DHW temperature with emergency/auxiliary heater	°C	65	65	65
High limit safety cut-out	°C	89	89	89
Min. installation room volume (recirculation air mode, general domestic use)	m ³	13	13	13
Refrigerant		R290	R290	R290
IP rating		IP24	IP24	IP24
Water connection		G 1 A	G 1 A	G 1 A
Power supply		1/N/PE 220-240 V ~50 Hz	1/N/PE 220-240 V ~50 Hz	1/N/PE 220-240 V ~50 Hz
Condensate connection		G 3/4 A	G 3/4 A	G 3/4 A
Permissible voltage range, external signal transmitter		~ 220-240 V 50/60 Hz	~ 220-240 V 50/60 Hz	~ 220-240 V 50/60 Hz
Recommended number of users		≤ 4	≤ 6	≤ 6
Rated voltage	V	220-240	220-240	220-240
Nominal capacity	l	200	300	294
Refrigerant charge	kg	0.152	0.152	0.152
Fuse protection	A	C16	C16	C16
Type of anode		Sacrificial anode	Sacrificial anode	Sacrificial anode
Max. DHW temperature with heat pump	°C	65	65	65
Min./max. application limits, heat source for heat pump operation	°C	+6/+43	+6/+43	+6/+43
Min./max. application limits, ambient temperature, cylinder	°C	0/+50	0/+50	0/+50
Min./max. conductivity, DHW	µS/cm	100-1500	100-1500	100-1500
Maximum height for installation	m	2000	2000	2000

18 Guarantee

The guarantee conditions of our German companies do not apply to appliances acquired outside of Germany. In countries where our subsidiaries sell our products a guarantee can only be issued by those subsidiaries. Such guarantee is only granted if the subsidiary has issued its own terms of guarantee. No other guarantee will be granted.

We shall not provide any guarantee for appliances acquired in countries where we have no subsidiary to sell our products. This will not affect warranties issued by any importers.

19 Environment and recycling

- Dispose of the appliances and materials after use in accordance with national regulations.



- If a crossed-out waste bin is pictured on the appliance, take the appliance to your local waste and recycling centre or nearest retail take-back point for reuse and recycling.



This document is made of recyclable paper.

- Dispose of the document at the end of the appliance's life cycle in accordance with national regulations.

STIEBEL ELTRON GmbH & Co. KG

Dr.-Stiebel-Straße 33 | 37603 Holzminden | Germany
info@stiebel-eltron.com | www.stiebel-eltron.com



A 366100-46350-9955
B 366675-46350-9955